


VENGEANCE Coil Travel Adjust



Tools Needed:

- 1.5mm Allen Wrench
- Dental Pick
- 9mm Shaft Clamps
- Small Punch
- Hammer
- 13mm Socket
- Soft Blow Hammer
- Slick Honey
- 7.5 Wt. Suspension Fluid
- Alcohol
- Towels or Clean Rag

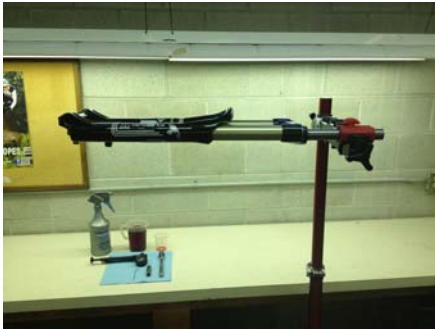

1. Mount in stand horizontally



2. Depressurize



3. Remove compression knobs with 1.5mm



4. Remove footnuts 50% of their threads with 13mm.



5. Use socket and softblow to break seal between footnut and lower leg.




6. Remove lowers and let fluid drain.



7. Remove top cap and spring perch.



8. Remove C-clip to remove rod and travel stop.

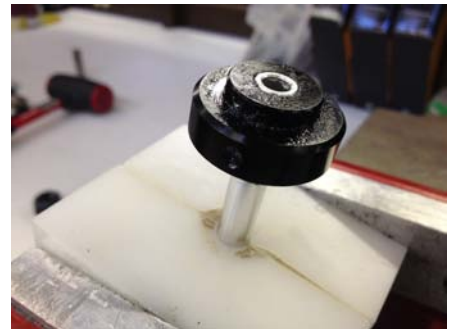

9. Clamp rod in 9mm shaft clamps.



10. Line up your punch and tap the push-pin through the travel stop just far enough so that the stop can move freely.



11. Move travel stop 10mm to desired travel setting. 160 or 170 Then tap push-pin back into rod.



12. Reinstall rod and C-clip. Make sure C-clip is 100% seated in the groove.



13. Reinstall lowers leaving an opening at bottom of leg then flip vertically.



14. Add 20cc's of 7.5 weight fluid to both sides of the lower leg.



15. Reinstall footnuts and compression knobs.



16. Pressurize



17. Clean with alcohol and clean towel/rag. Install on bike and SHRED!

